


**Save These
Instructions**

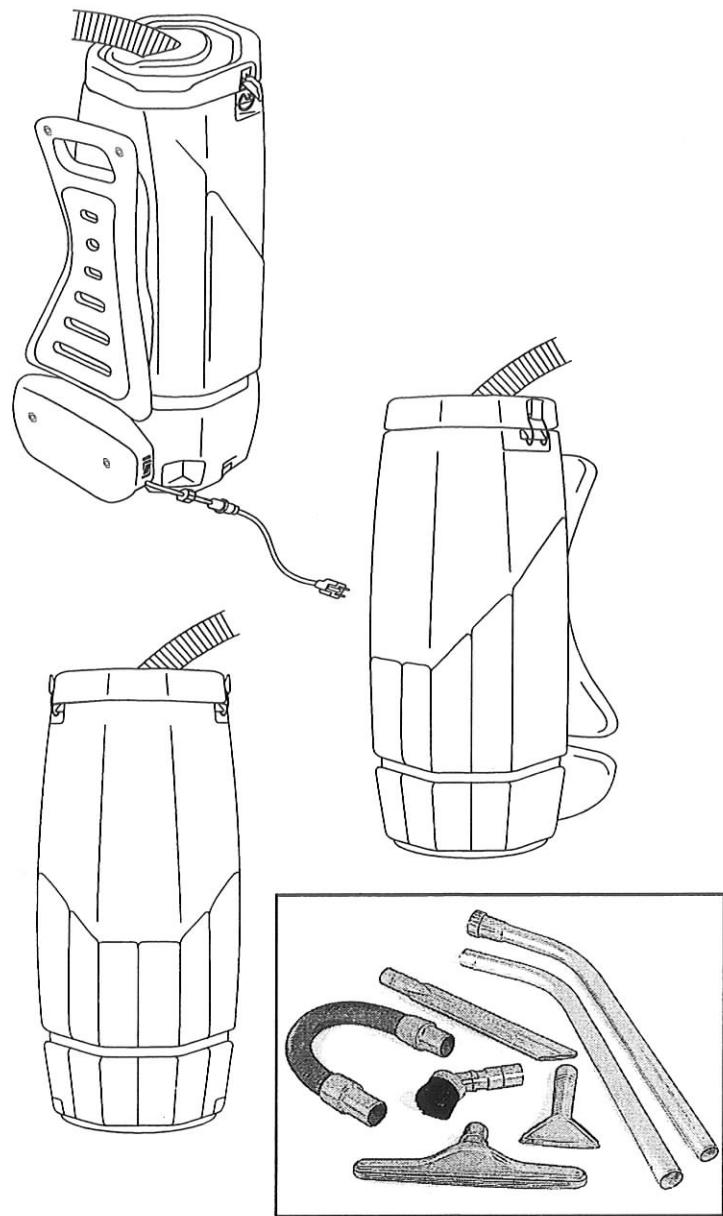

**Read and Follow All
Instructions,
Warnings and Cautions
Before Using This
Vacuum.**

**Safety,
Operation
And
Maintenance
Manual
w/Parts List**

**Backpack
Vacuum**

This unit is intended for commercial use.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE OPERATING

This vacuum will afford you many years of trouble-free operating satisfaction, provided it is given proper care. All parts have passed rigid quality control standards prior to their being assembled to produce the finished product. Prior to packaging, your vacuum was again inspected for assurance of flawless assembly.

This vacuum is protectively packed to prevent damage in shipment. We recommend that upon delivery, unpack the unit and inspect it for any possible damage. Only a visual examination will reveal damage that may have occurred.

If damage is discovered, immediately notify the transportation

company that delivered your vacuum. As a shipper, we are unable to report any claim for damage. You must originate any claim within 5 days.

This manual is for your protection and information. PLEASE READ CAREFULLY since failure to follow precautions could result in discomfort or injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

**To Reduce the Risk of Fire, Electric Shock or Injury:
Electric shock could occur if used on wet surfaces.
DO NOT expose to rain. Store indoors.**

When using this vacuum basic precautions should always be followed, including the following:

1. **DO NOT** leave the vacuum when plugged in. Unplug from the outlet when not in use and before servicing.
2. To avoid electric shock, **DO NOT** expose to rain. Store indoors. **DO NOT** use on wet surfaces.
3. This is **NOT** a toy. Close attention is necessary when used around or near children.
4. Use only as described in this safety manual. Use only manufacturer's recommended attachments and accessories.
5. **DO NOT** use this vacuum with damaged cord or plug. If the vacuum is not working as it should, because it has been dropped, damaged, left outdoors or dropped into water, contact an authorized service center or factory.
6. **DO NOT** pull or carry by the cord, use cord as a handle, close a door on cord or pull cord around sharp edges and corners. Keep cord away from heated surfaces.
7. **DO NOT** unplug the vacuum by pulling on the cord. To unplug, grasp the plug, not the cord.
8. **DO NOT** handle the plug of the vacuum with wet hands.
9. **DO NOT** put any objects into openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away

from openings and moving parts.

11. **DO NOT** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. **DO NOT** use without dust bag and/or filters in place.
13. **DO NOT** use the vacuum to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
14. Use extra care when cleaning on stairs.
15. **DO NOT** use where oxygen or anesthetics are used.
16. Turn off all controls before unplugging
17. The extension cord is provided with this unit is 50 foot, #16, 3 wire and **MUST** be used with this unit to insure grounding protection.
18. Replace damaged or worn parts immediately with genuine original equipment parts to maintain safety and to protect your limited warranty.

This vacuum has a outlet for a motorized power nozzle, always turn **OFF** vacuum before connecting or disconnecting the motorized nozzle. This vacuum must be connected to a properly grounded outlet only. (See grounded instructions)

SAVE THESE INSTRUCTIONS

Grounding Instructions

GROUNDING INSTRUCTIONS

DANGER:

Improper use of the grounding plug can result in a risk of electric shock.


Electrical equipment must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. The vacuum is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

If repair or replacement of the cord or plug is necessary, DO NOT connect the grounded wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.


GROUNDING METHODS



[Fig A]

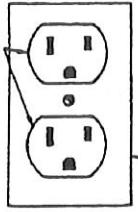

Grounding Outlet

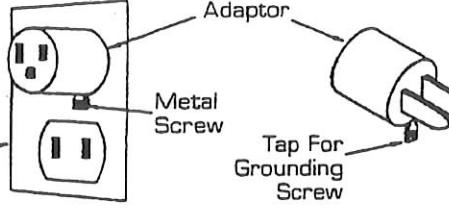

[Fig B]

[Fig C]

This electric equipment is for use on a nominal 120 volt circuit, and has a grounded plug that looks like the plug illustrated in [Fig A]. A temporary adaptor that looks like the adaptor illustrated in [Fig B & C] may be used to connect this plug to a 2-pole receptacle as shown in [Fig B] if a properly grounded outlet is not available.

The temporary adaptor should be used only until a properly grounded outlet [Fig A] can be installed by a qualified electrician. The green color rigid ear, lug or the like extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by a metal screw.

WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded.
DO NOT modify the plug provided with the equipment. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Note: In Canada, the use of a temporary adaptor is not permitted by the Canadian Electrical Code.

CARE OF YOUR VACUUM CLEANER

Treat your vacuum cleaner as you would any other high grade precision made product. Dropping, unreasonable bumping across thresholds and other misuses may result in a damaged unit which will not be covered by warranty.

Read this manual completely before operating this vacuum. It is important to follow the instructions in the manual to prevent the possibility of injury or damage to the user and/or machine.

When not in use the power cord should be wrapped around the molded-in cord wrap for storage. After each use, wipe the vacuum body, accessories and power cord with a damp cloth.

Importantes Mesures De Sécurité

LIRE TOUTES LES INSTRUCTIONS AVANT DE FAIRE FONCTIONNER (CET APPAREIL)

AVERTISSEMENT

Pour réduire les risques d'incendie, de choc électrique ou de blessure, l'utilisation d'un appareil électrique demande certaines précautions.

1. Ne pas laisser l'appareil sans surveillance lorsqu'il est branché. Débrancher lorsque l'appareil n'est pas utilisé et avant l'entretien.
2. Ne pas permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces derniers.
3. N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant.
4. Ne pas utiliser si le cordon ou la fiche est endommagé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommagé, oublié à l'extérieur ou immergé.
5. Ne pas tirer, soulever ou traîner l'appareil par le cordon. Ne pas utiliser le cordon comme une poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. Ne pas faire rouler l'appareil sur le cordon. Garder le cordon à l'écart des surfaces chaudes.
6. Ne pas débrancher en tirant sur le cordon. Tirer plutôt la fiche.
7. Ne pas toucher la fiche ou l'appareil lorsque vos mains sont humides.
8. N'insérer aucun objet dans les ouvertures. Ne pas utiliser l'appareil lorsqu'une ouverture est bloquée. S'assurer que de la poussière, de la peluche, des cheveux ou d'autres matières ne réduisent pas le débit d'air.
9. Maintenir les cheveux, les vêtements amples, les doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.
10. Ne pas aspirer de matières en combustion ou qui dégagent de la fumée, comme des cigarettes, des allumettes ou des cendres chaudes.
11. Ne pas utiliser l'appareil si le sac à poussière ou le filtre n'est pas en place.
12. Mettre toutes les commandes à la position ARRET avant de débrancher l'appareil.
13. User de prudence lors du nettoyage des escaliers.
14. Ne pas aspirer des liquides inflammables ou combustibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver de tels liquides.
15. Toujours mettre l'interrupteur de l'appareil à la position ARRET avant de brancher ou de débrancher la brosse à moteur.
16. Ne brancher qu'à une prise de courant avec mise à la terre. Voir les instructions visant la mise à la terre.

INSTRUCTIONS VISANT LA MISE A LA TERRE


Cet appareil doit être mis à la terre. En cas de défaillance ou de panne éventuelles, la mise à la terre fournit au courant un chemin de moindre résistance qui réduit le risque de choc électrique. Cet appareil est pourvu d'un cordon muni d'un conducteur de terre et

d'une fiche avec broche de terre. La fiche doit être branchée dans une prise appropriée correctement installée et mise à la terre conformément aux règlements et ordonnances municipaux.

Cet appareil est destiné à un circuit de 120V et est muni d'une fiche de mise à la terre semblable à celle illustrée par le croquis A de la figure "A". S'assurer que l'appareil est branché à une prise

de courant ayant la même configuration que la fiche. Aucun adaptateur ne devrait être utilisé avec cet appareil.

AVERTISSEMENT

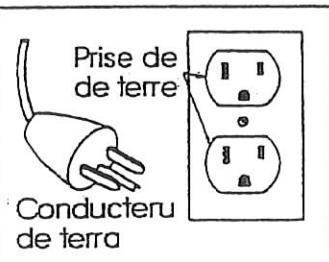

Un conducteur de terre mal raccordé peut entraîner un risque de choc électrique. Consulter un électricien ou un technicien d'entretien qualifié si vous n'êtes pas certain que la prise soit correctement mise à la terre. Ne pas modifier la fiche

fournie avec l'appareil si elle ne peut être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié.

CONSERVER CES INSTRUCTIONS


Operation & Assembly Instructions

PREPARATION AND OPERATION - DRY ONLY

This vacuum is equipped with a air-thru motor and is designed for dry pickup only. Unpack the carton and remove the vacuum and attachments. The backpack comes assembled you will need to install the hose and attachment.

To Change Paper Filter Bag

- 1] Turn top cap of vacuum a half counterclockwise and lift off the body.
- 2] Remove full paper bag from the tank and dispose of properly.
- 2] Expand paper filter bag and set inside the cloth filter.
- 3] Reinstall top cap and turn a half clockwise to tighten.

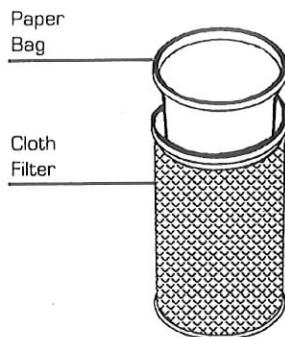

Cloth Filter Maintenance

The cloth filter should be cleaned each time you empty the tank. **DO NOT WASH** the cloth filter because shrinkage of the cloth and damage to the gasket can occur. To clean the cloth filter, shake off loose particles and brush exposed surface with a soft bristle brush.

CAUTION:

**Always exercise caution when handling the vacuum.
Dropping the vacuum could cause permanent damage
to the internal components.**


ASSEMBLY OF ATTACHMENTS

To Connect Hose

- 1] Connect one end of the hose into the inlet on top of vacuum.
- 2] Connect the other end of hose to the wand or tool you are planning to use.

Wand Assembly


The two piece wand requires some assembly.

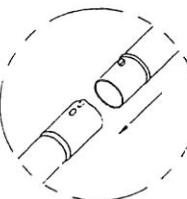


- 1] Align the button lock of the upper wand section with the opening for button lock in the lower wand section.
- 2] Push sections together, unit lock is accomplished.

To Assembly Tools

- 1] Turn wand nut counterclockwise approximately four complete turns.
- 2] Insert the tool into wand and coupling.
- 3] While holding tool in place, turn nut clockwise until wand nut is fully locked.

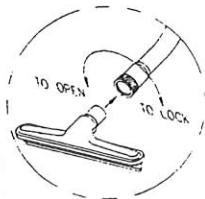


Schematic Drawing

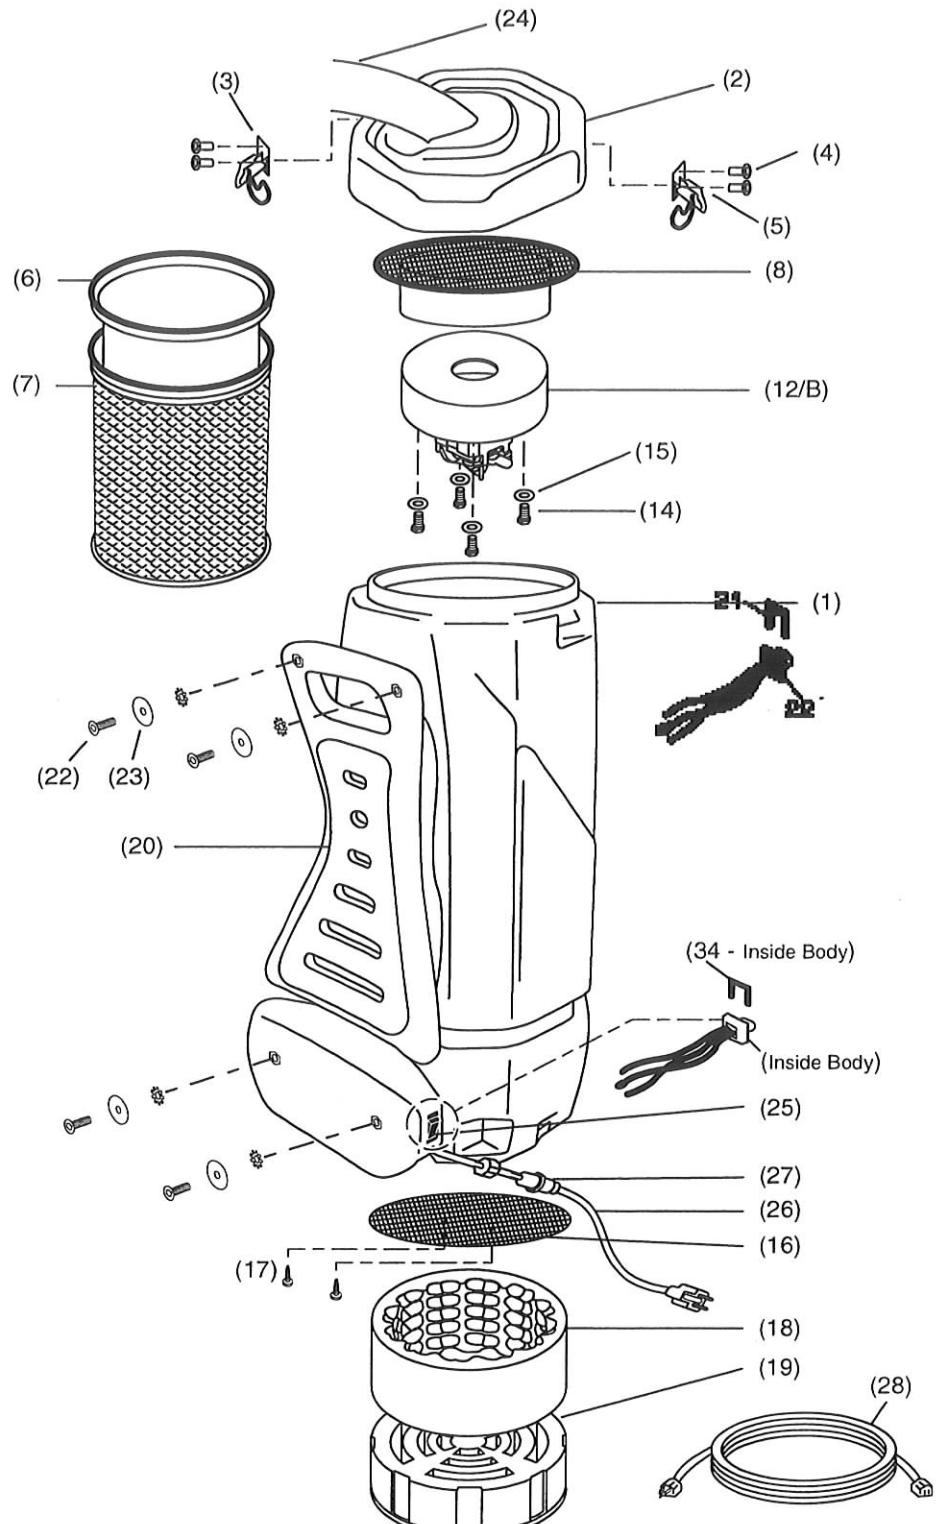

Replacement Parts List

Parts Breakdown


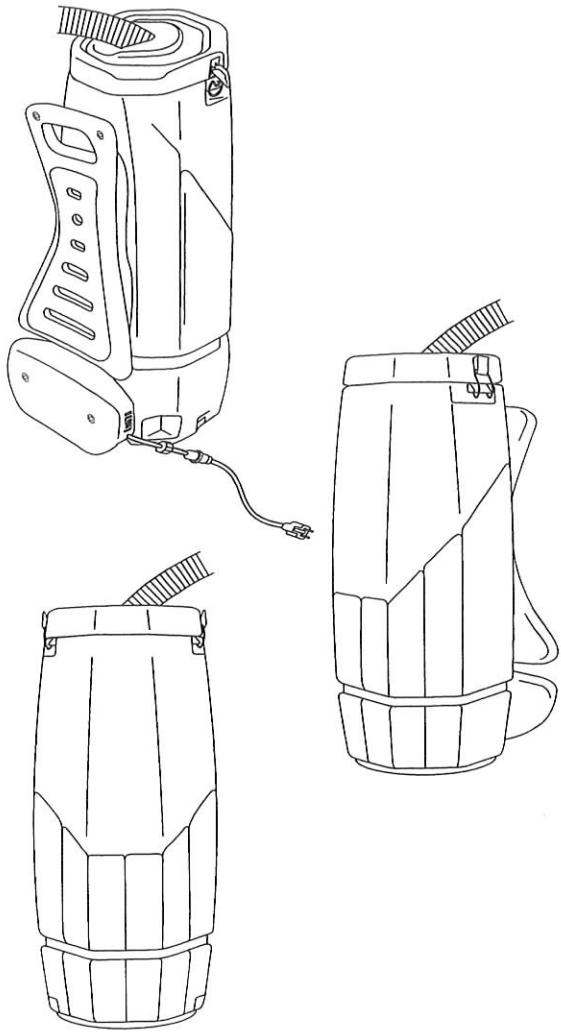


- 10-0001 Body
- 10-0002 Lid
- 10-0003 Lid Latch
- 10-0004 Lid Rivet
- 10-0005 Lid Rivet/Washer
- 10-0006 Micro-Lined Paper Bag
- 10-0007 10-qt Cloth Bag & Gasket
- 10-0008 Dome Filter
- 10-0009 Dome Filter Rivet
- 10-0010 Dome Filter Deflector Plate
- 10-0011 Dome Filter Deflector Plate with Trim/Lock
- 10-0012 Motor XP-Whisper
- 10-0013 Motor Super/Raven
- 10-0014 Motor Screws
- 10-0015 Motor Washers
- 10-0016 Motor Deflector
- 10-0017 Motor Deflector/Screws
- 10-0018 Sound Filter/Band
- 10-0019 Dual Cell Noise Filter
- 10-0020 Cushion Back Pad
- 10-0021 Shoulder & Waist Belt (not shown)
- 10-0022 Shoulder & Waist Belt Screws
- 10-0023 Shoulder & Waist Belt Washers
- 10-0024 Vacuum Hose - Smooth Core
- 10-0025 On/Off Switch
- 10-0026 17" Power Cord
- 10-0027 Pigtail & Nut
- 10-0028 50' Electric Cord
- 10-0029 2 Piece Aluminum Wand (not shown)
- 10-0030 1 - 1/2" Dust Brush (not shown)
- 10-0031 1 - 1/2" Upholstery Tool (not shown)
- 10-0032 14" Floor Scalloped Tool (not shown)
- 10-0033 17" Crevice Tool (not shown)
- 10-0034 Power Head Electrical Fitting (Bulkhead)
- 10-0035 Box with Logo (not shown)

Replacement Tools

Ref No	Description	Part No
50	Complete Tool Kit	
51	2 Piece Aluminum Wand	10-0029
52	Stretch Hose	10-0036
53	17" Crevice Tool	10-0033
54	Round Dust Brush	10-0037
55	Upholstery Tool	10-0031
56	14" Scalloped Carpet Tool	10-0032
60	16" Carpet/Floor Tool (Optional)	

Tool Kit - 1 1/2"

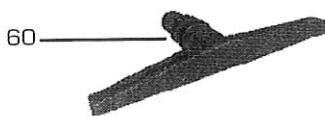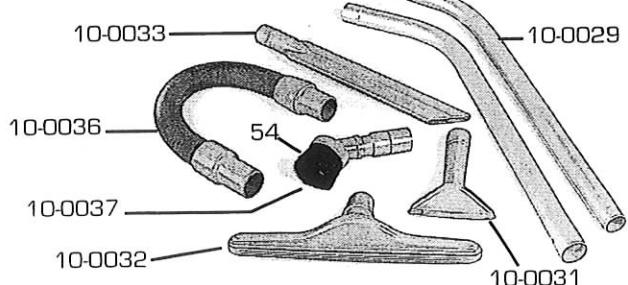

Trouble Shooting Guide

CAUTION

Always disconnect power cord before servicing vacuum

WARNING

Repairs should only be performed by an authorized service center.

PROBLEM: Loss of Vacuum.

CAUSE:

1. Cap is damaged.
2. Faulty vacuum motor.
3. Full paper filter bag.
4. Clogged hose or wand.
5. Loose or broken fan.

SOLUTION:

1. Inspect and replace if needed.
2. Call manufacturer or service center.
3. Replace paper filter bag.
4. Remove obstruction.
5. Contact manufacturer or service center.

PROBLEM: Motor is not running.

CAUSE:

1. Faulty ON/OFF switch.
2. Power cord defective.
3. Loose connection or wiring.
3. Motor defective.
4. Blown fuse or tripped circuit breaker.

SOLUTION:

1. Contact manufacturer or service center.
2. Contact manufacturer or service center.
3. Contact manufacturer or service center.
4. Contact manufacturer or service center.
5. Replace fuse or reset circuit breaker.

PROBLEM: Dust blowing from vacuum when running.

CAUSE:

1. Full paper filter bag.
2. Paper filter bag not installed properly.
3. Cloth filter bag dirty.
4. Cloth or paper filter bag is torn.

SOLUTION:

1. Replace filter bag.
2. Reininstall or replace paper filter bag properly.
3. Clean cloth filter bag.
4. Replace.

Warranty

Your vacuum is guaranteed to be free of manufacturer's defects, and will warranty for 5 years the polyethylene body, and 5 years the electrical components. We reserve the right to refuse warranties in cases of abuse. This warranty is available to the original purchaser. All warranties are F.O.B. factory. Factory does not cover shipping costs. Receipt and warranty registration required.